




How to Stretch the shur-loc® "E-Z" Frame


1. shur-loc® connectors must be fully engaged before stretching.
2. Always tension the long bars first during both stretching processes.
3. For a start to finish demo go to www.shurloc.com and visit our E-Z Frame page.

STEP 1

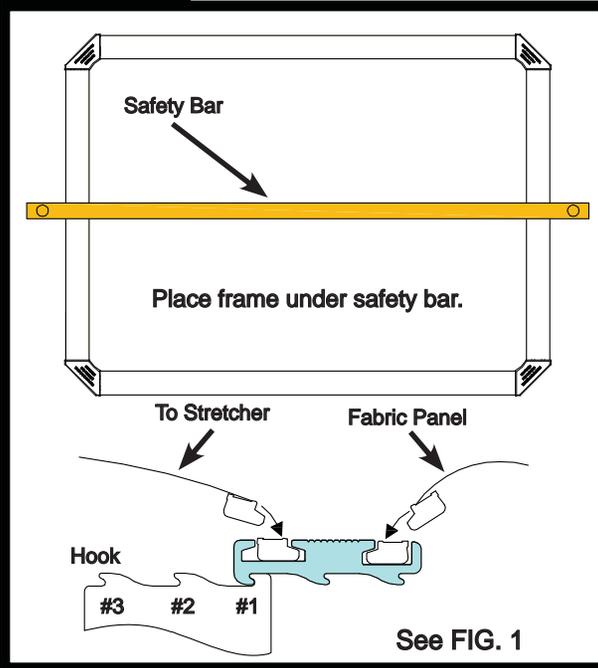


STEP 2

1ST STAGE TENSION

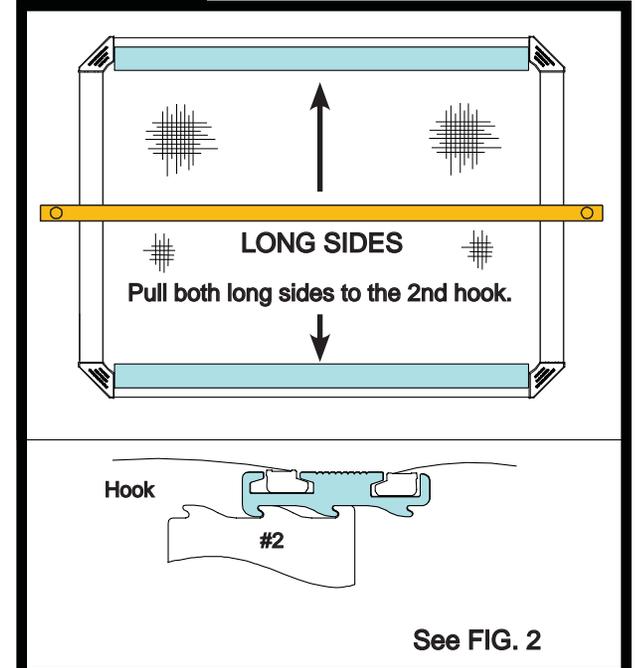


STEP 3

1ST STAGE TENSION

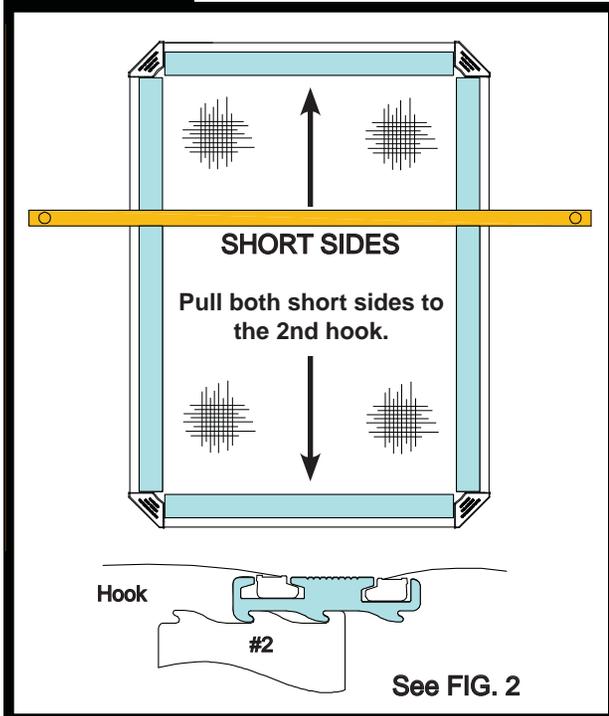


STEP 4

2ND STAGE TENSION

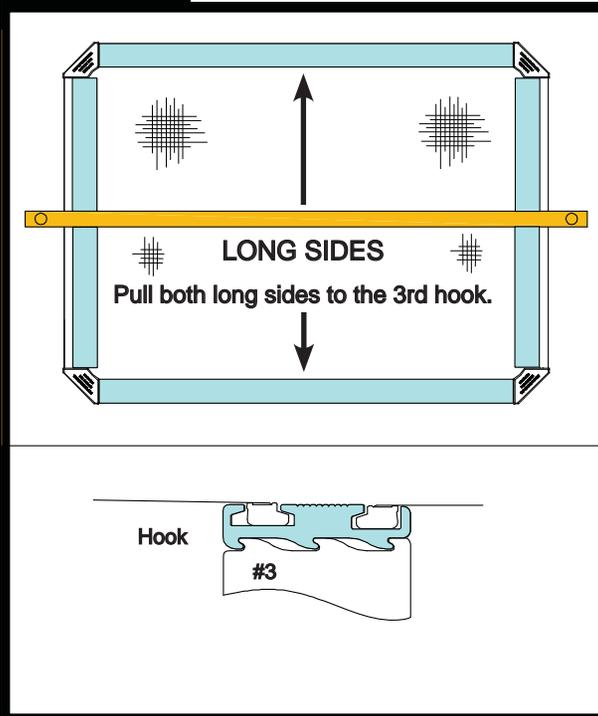

STEP 5

2ND STAGE TENSION

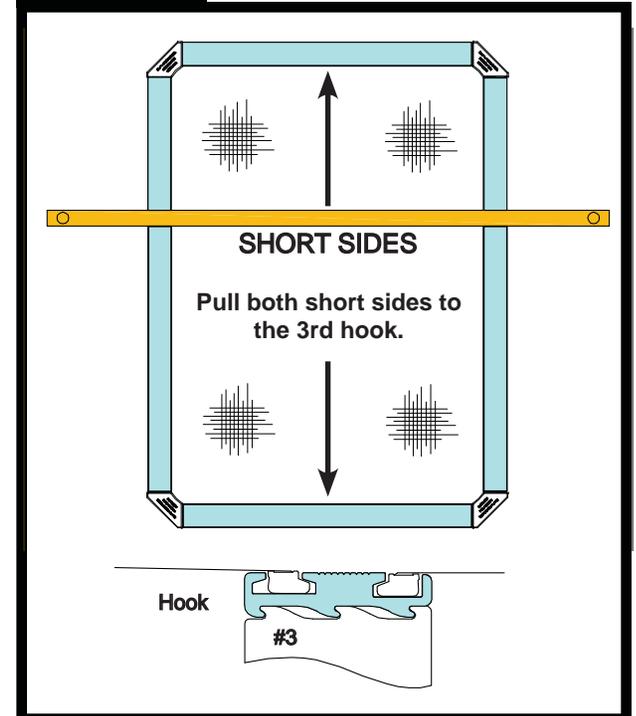

HOW TO STRETCH THE SHUR-LOC® "E-Z" FRAME WITH THE SHUR-LOC® "E-Z" STRETCHER 2

FIG.1 - LOADING POSITION





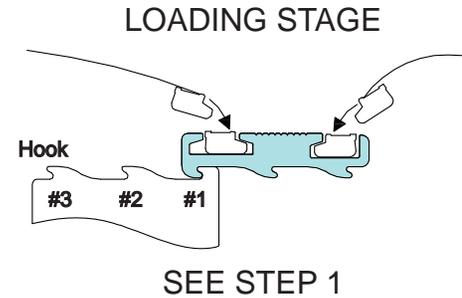


FIG. 2 - TENSIONING POSITION

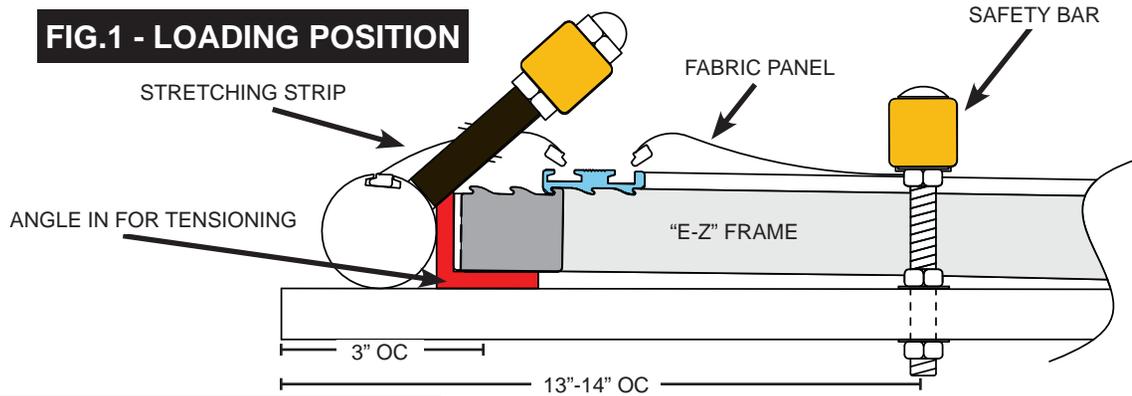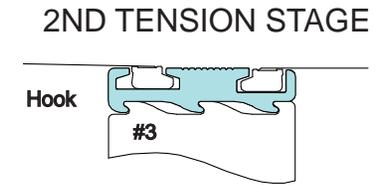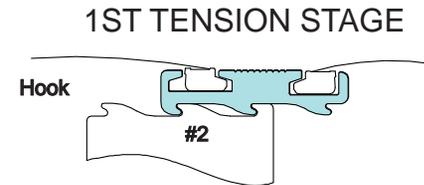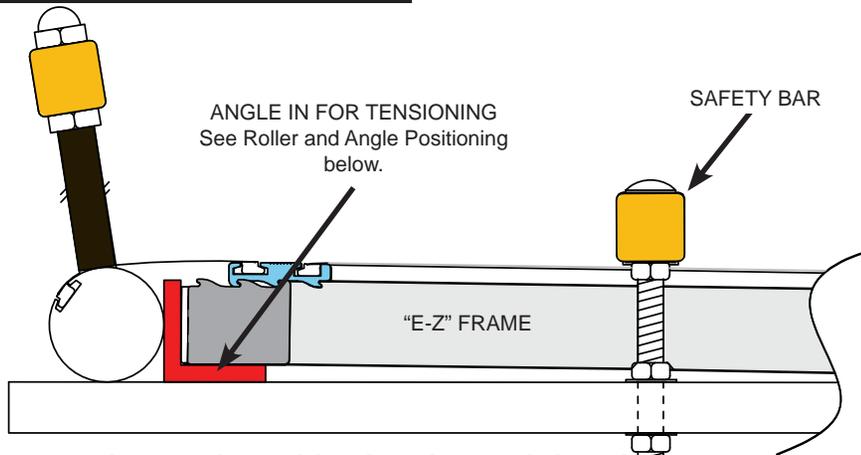

IMPORTANT NOTE: ANGLE POSITION FOR TENSIONING

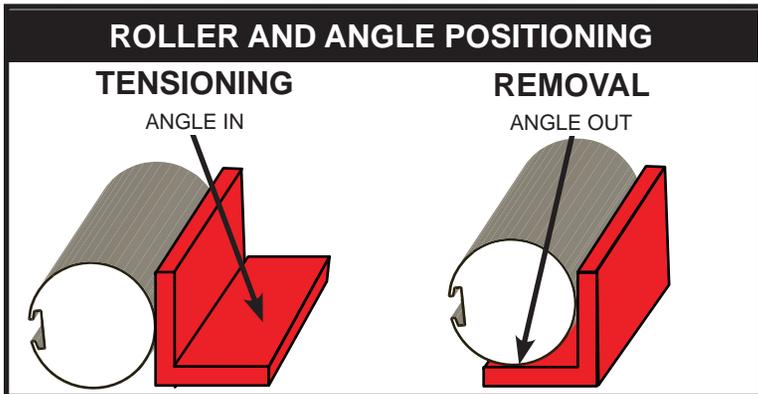


FIG. 3 - REMOVAL POSITION

